

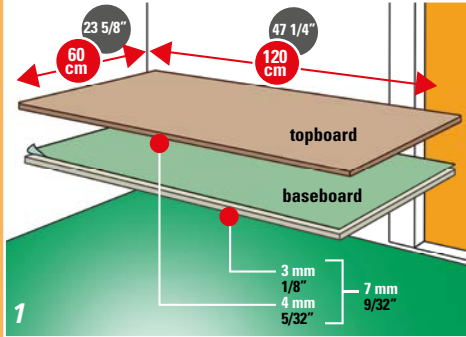
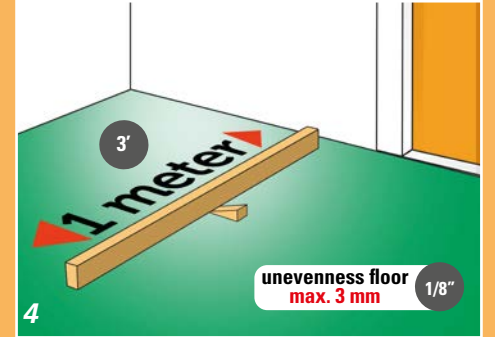


FITTING INSTRUCTIONS


FLOOR PREPARATION

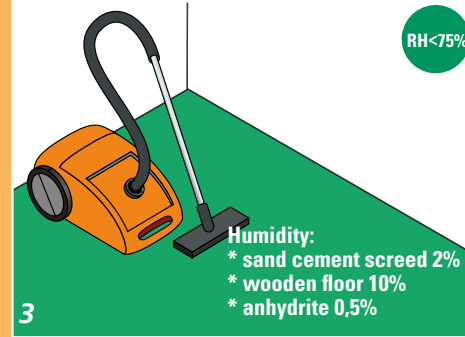


ACCLIMATIZE 24 HOURS IN ADVANCE

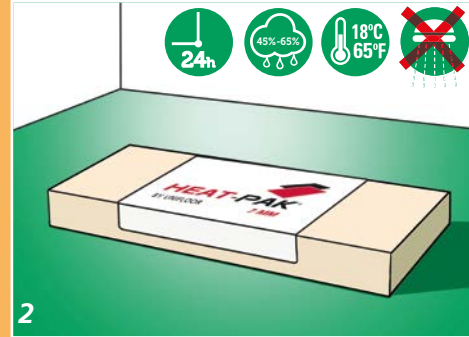


ELECTRICAL FLOOR HEATING

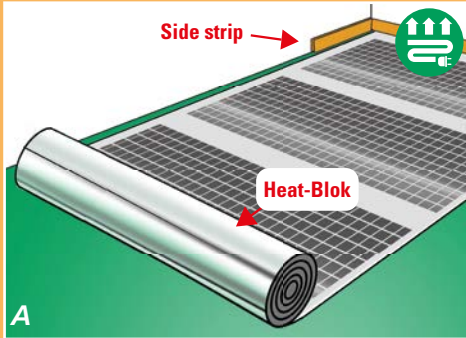


ELECTRICAL FLOOR HEATING

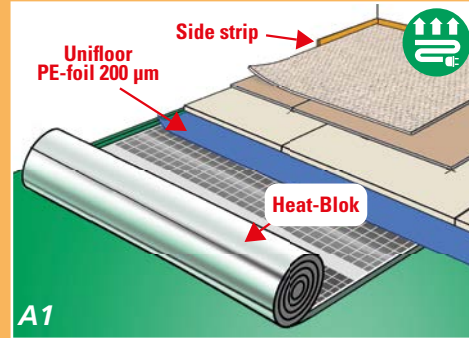













WATER UNDERFLOOR HEATING

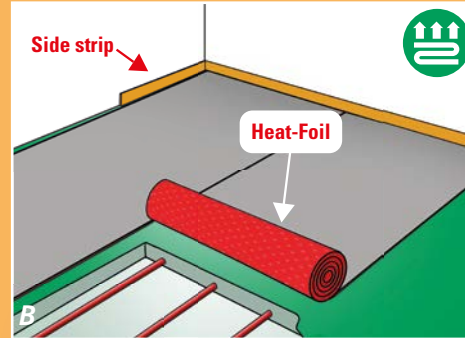



WATER UNDERFLOOR HEATING

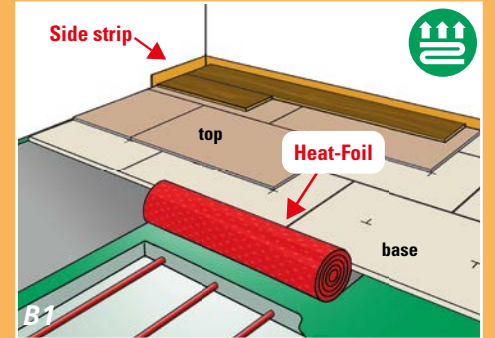

FITTING INSTRUCTIONS

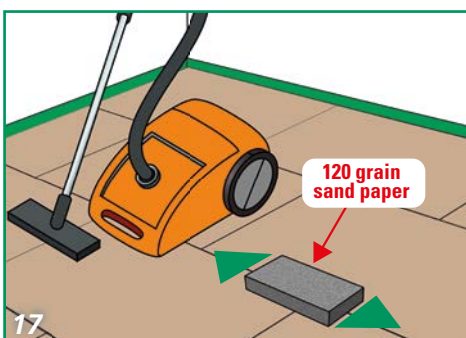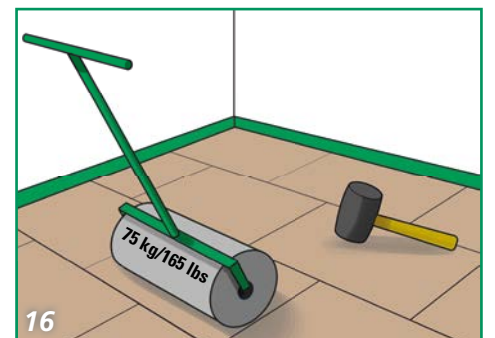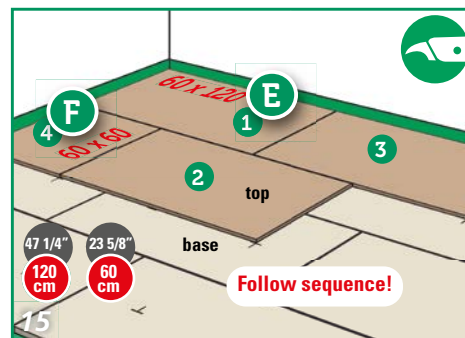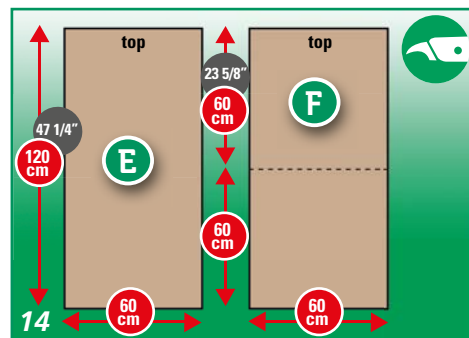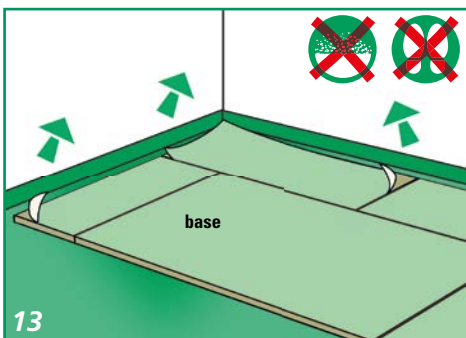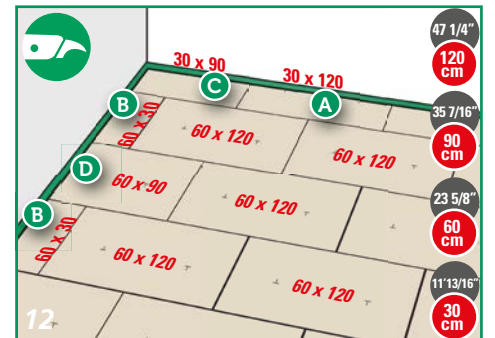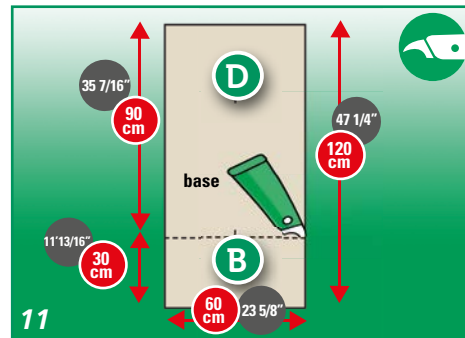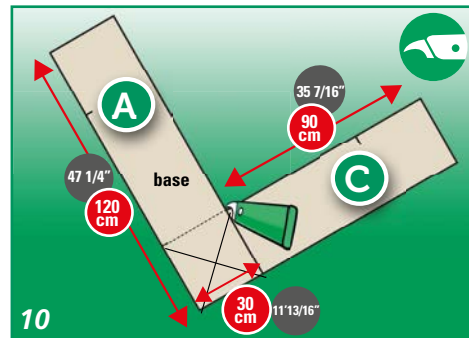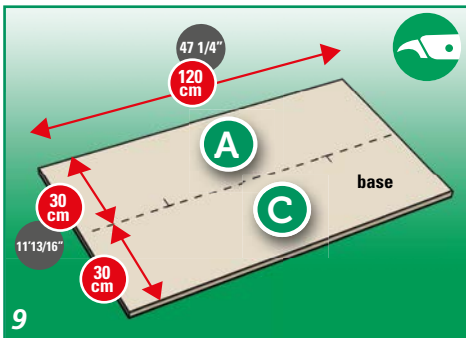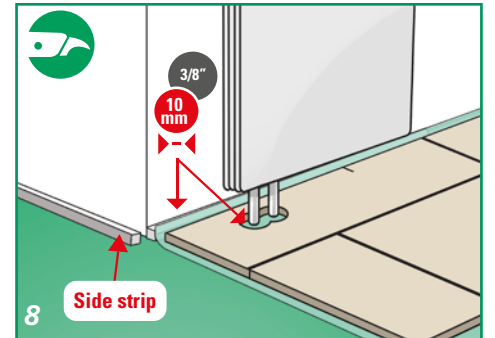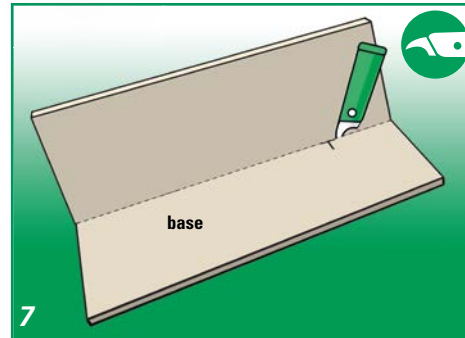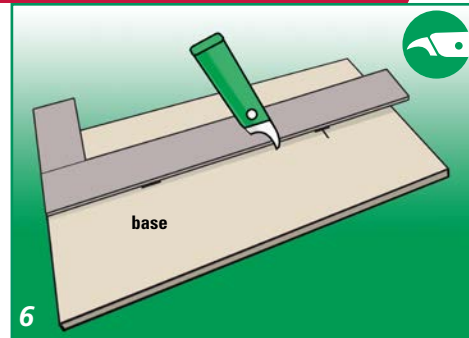

FINISHING

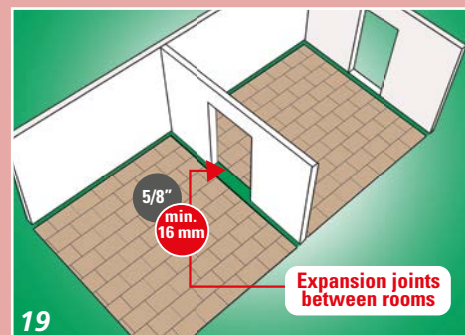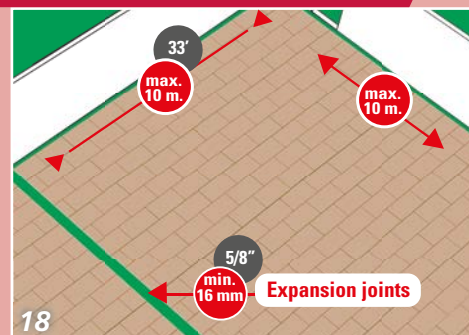

PLACE FLOORCOVERING WITHIN 48 HOURS

